

USING YOUR REMOTE CONTROL

Find programs with just a few taps of the remote control. Use these quick tips to enjoy full access to your guide.

1 INFO

From Live TV:

- Press 1x to Access the On Now/On Next Banner
- Press 2x to Display the TV Listings Grid

2 CHANNEL UP (▲)/DOWN (▼)

- While watching TV: Displays On Now/On Next Banner.
- In the TV Listings Grid: Press up (▲) / down (▼) to scan through channel line up

ARROW KEYS
Use these arrow keys to navigate the guide:



3 OK AND ENTER

OK button has the same functions as ENTER. While in the guide, pressing OK button will tune to that channel and what is now playing.

4 LAST

Returns you to the last screen or channel viewed.

5 LANGUAGE AND CLOSED CAPTIONING


Yellow A press for secondary language (if available)
Red C press for available closed captioning

PARENTAL CONTROLS

Set viewing restrictions by channel and rating. Locked programs cannot be viewed until the assigned PIN is entered.

Setting Up Your PIN

- 1 Press MENU (orange button) on the Remote Control.
- 2 Press down ARROW KEY to access LOCKS SET UP
- 3 While in LOCKS SETUP press right ARROW KEY to SET PIN.
- 4 A pop-up window appears.
- 5 Enter a 4 digit PIN of your choice
- 6 The system will prompt you to confirm your PIN again. Once confirmed, the option will now read PIN Set Up.

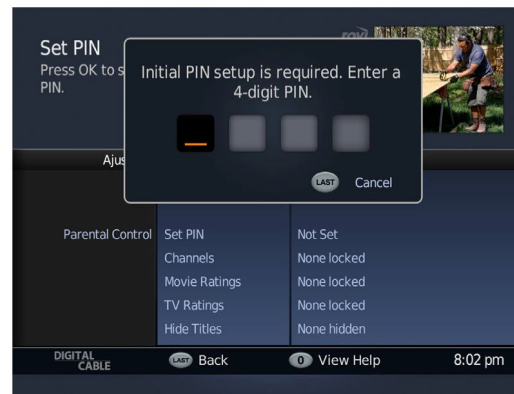

Locking By Ratings And Channels

- 1 Follow setting up your PIN instructions above.
- 2 Press ARROW KEY down to highlight Master Locks, Channel Locks or TV Ratings Lock and follow on screen instructions.
- 3 Use the up and down ARROW KEYS to navigate the list.
- 4 Highlight the desired channel or rating and press (OK) to initiate the lock. The lock icon will change.
- 5 While the lock is highlighted, press (OK) to change the lock again.



Evo DTA GUIDE
QUICK REFERENCE GUIDE
evolution

